

	A	B	C	D
1	MARCA	MODELLO	PREZZO IVATO	MODELLI MACCHINE
2	HP	C2P05AE/N.62XLBK-C	36	ENVY 5640 e-AiO, ENVY 7640 e-AiO, Officejet 5740 e-AiO
3	HP	C2P07AE/N.62XLC-C	40	ENVY 5640 e-AiO, ENVY 7640 e-AiO, Officejet 5740 e-AiO
4	HP	CC641/16ML.300XL BK	29	F4272 F4210 F4280 F4580 F4500 C4680 D2560 D2660 D5560 D1660,D2530,D2545,D2563,D2566,D2568,D2663,D2668,D5563,D5568,F2480,F4224,F4230,F4235, F4240,F4250,F4273,F4274,F4275,F4283,F4288,F4292,F4293,F4294,F4435,F4440,F4450,F4470,F4472,F4473,F4480,F4483,F4488,F4492,C4610,C4635,C4640,C4650,C4670,C4680,C4683,C4685,C4688,C4780
5	HP	CC644EE/N.300XLC OL	31	PER F4272 F4210 F4280 F4580 F4500 C4680 D2560 D2660 D5560 D1660,D2530,D2545,D2563,D2566,D2568,D2663,D2668,D5563,D5568,F2480,F4224,F4230,F4235, F4240,F4250,F4273,F4274,F4275,F4283,F4288,F4292,F4293,F4294,F4435,F4440,F4450,F4470,F4472,F4473,F4480,F4483,F4488,F4492,C4610,C4635,C4640,C4650,C4670,C4680,C4683,C4685,C4688,C4780
6	HP	CH563EE/N.301XLBK-	29	DESKJET DESKJET: 1010, 1012, 1510, 1511, 1512, 1513, 1514, 2540, 2542 ENVY: 4500, 4502, 4503, 4504
7	HP	CH564/N.301XLCOL-C	31	DESKJET DESKJET: 1010, 1012, 1510, 1511, 1512, 1513, 1514, 2540, 2542 ENVY: 4500, 4502, 4503, 4504
8	HP	F6U67AE-N.302XLC-C	31	OFFICEJET 3830, 3833, 3835 3630, 4650, 4654, 4655 DESKJET 1110, 2130, 2132, 2134, 3635, 3636, 3637, 3638, 3639 ENVY 4520, 4522, 4524, 4525, 4527
9	HP	F6U68AE-N.302XLBK-	28	OFFICEJET 3830, 3833, 3835 3630, 4650, 4654, 4655 DESKJET 1110, 2130, 2132, 2134, 3635, 3636, 3637, 3638, 3639 ENVY 4520, 4522, 4524, 4525, 4527
10	HP	N9K07AE-N.304XLCOL	31	DESKJET 3700-3730-3750-3762
11	HP	N9K08AE-N.304XLBK-	29	DESKJET 3700-3730-3750-3762
12	HP	CN684EE(BK)/.364XL	15	DESKJET 3520AIO, PHOTOSMART B010A, B109, B100, B110, B209, B210, B8550, C5324, C5380, 5510, 5520, C6324, C6380, D5460, C309, C310, C410, C510, 3070A OFFICEJET 4620
13	HP	CB323(C)/.364XL-C	14	DESKJET 3520AIO, PHOTOSMART B010A, B109, B100, B110, B209, B210, B8550, C5324, C5380, 5510, 5520, C6324, C6380, D5460, C309, C310, C410, C510, 3070A OFFICEJET 4620
14	HP	CB324(M)/.364XL-C	14	DESKJET 3520AIO, PHOTOSMART B010A, B109, B100, B110, B209, B210, B8550, C5324, C5380, 5510, 5520, C6324, C6380, D5460, C309, C310, C410, C510, 3070A OFFICEJET 4621
15	HP	CB325(Y).364XL-C	14	DESKJET 3520AIO, PHOTOSMART B010A, B109, B100, B110, B209, B210, B8550, C5324, C5380, 5510, 5520, C6324, C6380, D5460, C309, C310, C410, C510, 3070A OFFICEJET 4622
16	EPSON	T03A1/N.603XLBK-C	24	PER EPSON WF-2830DWF, WF-2835DWF, WF-2850DWF, XP-2100, XP-2105, XP-3100, XP-4100, XP-3105, XP-4105

	A	B	C	D
17	EPSON	T03A2/N.603XLC-C	15	PER EPSON WF-2830DWF, WF-2835DWF, WF-2850DWF, XP-2100, XP-2105, XP-3100, XP-4100, XP-3105, XP-4105
18	EPSON	T03A3/N.603XLM-C	15	PER EPSON WF-2830DWF, WF-2835DWF, WF-2850DWF, XP-2100, XP-2105, XP-3100, XP-4100, XP-3105, XP-4106
19	EPSON	T03A4/N.603XLY-C	15	PER EPSON WF-2830DWF, WF-2835DWF, WF-2850DWF, XP-2100, XP-2105, XP-3100, XP-4100, XP-3105, XP-4107
20	EPSON	T0711(BK)-C	8	PER EPSON SX105, SX115, SX205, SX215, SX400, SX415, SX510W, SX515W, SX600FW, 1100 BX300F, 600FW, D78, D92, D120, DX4000, DX5000, DX6000, DX7000F, DX8400, DX9400F
21	EPSON	T0712(C)-C	8	PER EPSON SX105, SX115, SX205, SX215, SX400, SX415, SX510W, SX515W, SX600FW, 1100 BX300F, 600FW, D78, D92, D120, DX4000, DX5000, DX6000, DX7000F, DX8400, DX9400F
22	EPSON	T0713(M)-C	8	PER EPSON SX105, SX115, SX205, SX215, SX400, SX415, SX510W, SX515W, SX600FW, 1100 BX300F, 600FW, D78, D92, D120, DX4000, DX5000, DX6000, DX7000F, DX8400, DX9400F
23	EPSON	T0714(Y)-C	8	PER EPSON SX105, SX115, SX205, SX215, SX400, SX415, SX510W, SX515W, SX600FW, 1100 BX300F, 600FW, D78, D92, D120, DX4000, DX5000, DX6000, DX7000F, DX8400, DX9400F
24	EPSON	T1291(BK)-C	10	PER EPSON STYLUS SX420W-SX425W-SX430W SX525WD-SX535-SX620FW/ OFFICE B42WD-BX305F-BX320FW-BX525-BX535-BX625-WF7515
25	EPSON	T1292(C)-C	10	PER EPSON STYLUS SX420W-SX425W-SX430W SX525WD-SX535-SX620FW/ OFFICE B42WD-BX305F-BX320FW-BX525-BX535-BX625-WF7516
26	EPSON	T1293(M)-C	10	PER EPSON STYLUS SX420W-SX425W-SX430W SX525WD-SX535-SX620FW/ OFFICE B42WD-BX305F-BX320FW-BX525-BX535-BX625-WF7517
27	EPSON	T1294(Y)-C	10	PER EPSON STYLUS SX420W-SX425W-SX430W SX525WD-SX535-SX620FW/ OFFICE B42WD-BX305F-BX320FW-BX525-BX535-BX625-WF7518
28	EPSON	T16314010/N.16BK XL	13	PER EPSON WORKFORCE WF2010W-WF2510WF-WF2520NF-WF2530WF-WF254WF-WF2630
29	EPSON	T16324010/N.16CX L-	11	PER EPSON WORKFORCE WF2010W-WF2510WF-WF2520NF-WF2530WF-WF254WF-WF2630
30	EPSON	T16334010/N.16M XL-	11	PER EPSON WORKFORCE WF2010W-WF2510WF-WF2520NF-WF2530WF-WF254WF-WF2631
31	EPSON	T16344010/N.16YX L-	11	PER EPSON WORKFORCE WF2010W-WF2510WF-WF2520NF-WF2530WF-WF254WF-WF2632
32	EPSON	T2991/N.29XLBK-C	19	PER EPSON XP235-XP245-XP332-XP335-XP432-XP435
33	EPSON	T2992/N.29XLC-C	15	PER EPSON XP235-XP245-XP332-XP335-XP432-XP435
34	EPSON	T2993/N.29XLM-C	15	PER EPSON XP235-XP245-XP332-XP335-XP432-XP436
35	EPSON	T2994/N.29XLY-C	15	PER EPSON XP235-XP245-XP332-XP335-XP432-XP437
36	CANON	PG545XL-C	26	PER CANON PIXMA MG2550/ MX495 PG545XL
37	CANON	CL546XL-C	26	PER CANON PIXMA MG2550/ MX495 PG546XL
38	CANON	PGI570PGBKXL-C	14	PER CANON PIXMA MG6850, MG7750, MG5750, TS5050, TS6050, TS8050, TS9050
39	CANON	CLI571BKXL-C	14	PER CANON PIXMA MG6850, MG7750, MG5750, TS5050, TS6050, TS8050, TS9050

	A	B	C	D
40	CANON	CLI571CXL-C	14	PER CANON PIXMA MG6850, MG7750, MG5750, TS5050, TS6050, TS8050, TS9051
41	CANON	CLI571MXL-C	14	PER CANON PIXMA MG6850, MG7750, MG5750, TS5050, TS6050, TS8050, TS9053
42	CANON	CLI571YXL-C	14	PER CANON PIXMA MG6850, MG7750, MG5750, TS5050, TS6050, TS8050, TS9054
43	CANON	PGI580XXLBK-C	15	PER CANON TS6150, TS8150, TS9150, TR7550, TS6250, TS9550
44	CANON	CLI581XXLBK-C	14	PER CANON TS6150, TS8150, TS9150, TR7550, TS6250, TS9550
45	CANON	CLI581XXLC-C	14	PER CANON TS6150, TS8150, TS9150, TR7550, TS6250, TS9551
46	CANON	CLI581XXLM-C	16	PER CANON TS6150, TS8150, TS9150, TR7550, TS6250, TS9552
47	CANON	CLI581XXLY-C	16	PER CANON TS6150, TS8150, TS9150, TR7550, TS6250, TS9554
48	BROTHER	LC1240-LC1280BK(XL)	19	PER BROTHER MFC J5910-J6510- J6710-J6910 MFC J430W-MFC J625DW-MFC J825DW DCP J525W-DCP L725DW-DCPJ925DW
49	BROTHER	LC1240-LC1280C(XL)	13	PER BROTHER MFC J5910-J6510-MFC J6710-MFC J6910- MFC J430W-MFC J625DW-MFC J825DW DCP J525W-DCP L725DW-DCPJ925DW
50	BROTHER	LC1240-LC1280M(XL)	13	PER BROTHER MFC J5910-J6510-MFC J6710-MFC J6910- MFC J430W-MFC J625DW-MFC J825DW DCP J525W-DCP L725DW-DCPJ925DW
51	BROTHER	LC1240-LC1280Y(XL)	13	PER BROTHER MFC J5910-J6510-MFC J6710-MFC J6910- MFC J430W-MFC J625DW-MFC J825DW DCP J525W-DCP L725DW-DCPJ925DW
52	BROTHER	LC3219XLBK-C	26	PER BROTHER MFC-J6930DW, J6530DW, J5730DW, J5330DW, J6935DW, J5930DW
53	BROTHER	LC3219XLC-C	19	PER BROTHER MFC-J6930DW, J6530DW, J5730DW, J5330DW, J6935DW, J5930DW
54	BROTHER	LC3219XLM-C	19	PER BROTHER MFC-J6930DW, J6530DW, J5730DW, J5330DW, J6935DW, J5930DW
55	BROTHER	LC3219XLY-C	19	PER BROTHER MFC-J6930DW, J6530DW, J5730DW, J5330DW, J6935DW, J5930DW
56	BROTHER	TN1050-RL	42	PER BROTHER HL1110 - HL1212W - DCP1510 - DCP1610 - DCP1612W - MFC1810- MFC1910W - DCP1512A, (1000 COPIE)
57	BROTHER	TN2220-RL	60	PER BROTHER FAX 2840/HL2240/HL2250/HL2270/DCP7060/DCP7065/DCP7070/MFC7360N, MFC7460,MFC7860, (2600 COPIE)
58	BROTHER	TN2320-RL	60	PER BROTHER HLL2300D, HLL2320D, HLL2340DW, HLL2360DN, HLL2360DW, HLL2365DW, HLL2380DW, DCPL2500D, DCPL2520DW, DCPL2540DN, DCPL2560DW, MFCL2700DW, MFCL2720DW, MFCL2740DW. (2600 COPIE)
59	BROTHER	TN2420-RL	67	PER BROTHER HL-L2310/2350/2370/2375 DCP-L 2510/2550 MFC-L2710/2730/2750, (3000 COPIE)
60	HP	CF244A-RL	47	LASERJET PRO M15A-M15W-M28W, (1000 COPIE)
61	HP	CE285A-RL	55	PER HP M1132 -P1102-P1102W-P1103-M1132-M1212NF M1217 (1600 COPIE)
62	SAMSUNG	MLTD111S-RL	48	SAMSUNA1:D62G SLM2020W-SLM2022W-SLM2026W-SLM2070-SLM2070F-M2070FW, (1000 COPIE)